





## TRUTH SKYLIGHT OPERATOR INSTRUCTION & ADJUSTMENT GUIDE

**Congratulations on your purchase of a Tamlite Operable Skylight. Please follow the enclosed instructions for proper installation.**

1. *Install the skylight onto the curb according to the instructions located in the hardware packet.*
2. *After installation of the skylight, make sure the skylight is seated properly on to the lower frame of the unit. See Fig.1*
3. *Make sure the chain exit is against the bottom of the sash bracket, Fig.1. Hold the skylight operator on wall with chain exit centered on the sash bracket. Mark location of the operator on curb. Now mount the operator on to the wall, 1/16" lower from where you marked it. Use #10 x 1-3/4" screws provided to mount the unit.*
4. *Pass the chain through the bug screen and slide the chain into sash bracket. Slide sash pin through sash bracket and chain, to hold chain in place.*
5. *Mount either Hook adapter or Handle adapter onto the operator and tighten.*
6. *Raise and lower skylight fully, making sure there is no interference with bug screen. Make sure skylight seals completely when closed.*

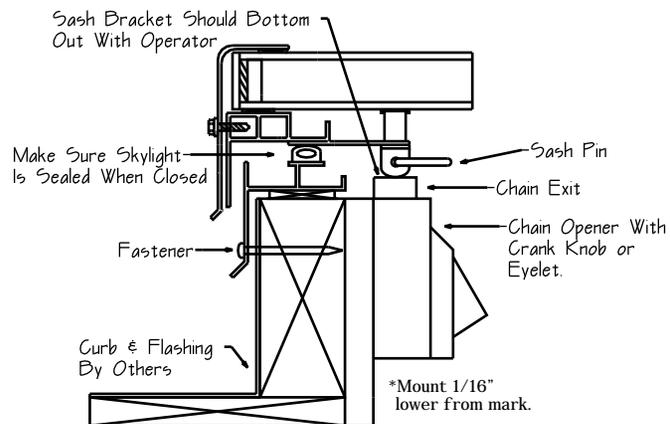

**Fig. 1**

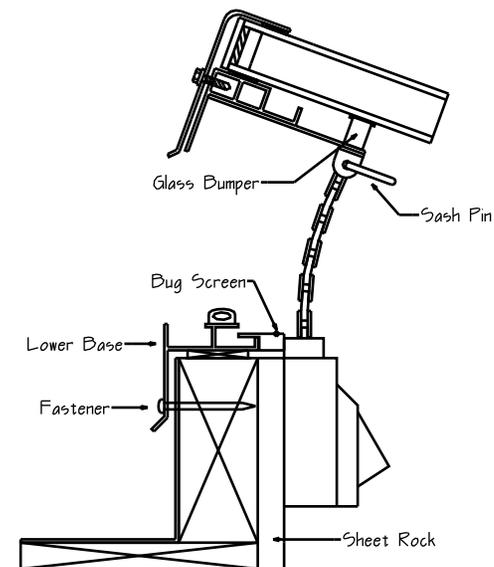

**Fig. 2**